

# ABC's Monday Night Football Talking Remote

*Operating Manual*

# EXCALIBUR

ELECTRONICS



Model No.: 201

[www.ExcaliburElectronics.com](http://www.ExcaliburElectronics.com)

Congratulations on your purchase of The *ABC Sports* and Excalibur Electronics' *ABC's Monday Night Football Talking Remote*!

The *ABC's Monday Night Football Talking Remote* is easy to use, but be sure to use it safely. Before starting, please read this manual thoroughly, especially noting safety, care and battery information.

Keep this manual for reference.

*Caution: Do not throw or toss your remote. Throwing it could cause injury.*




The legendary King Arthur brandished a magic sword, Excalibur, from which we take our company name. With this unique weapon in his hands, he could not be vanquished.

Although Excalibur Electronics can't claim the magical secrets of Merlin, King Arthur's court wizard, sometimes our patented technology may make it seem as if we could.

We make you think.

© 2004 The ABC Sports Inc.  
The ABC Sports name and logo are trademarks of ABC Sports Inc.

## Layout of Talking Football Remote

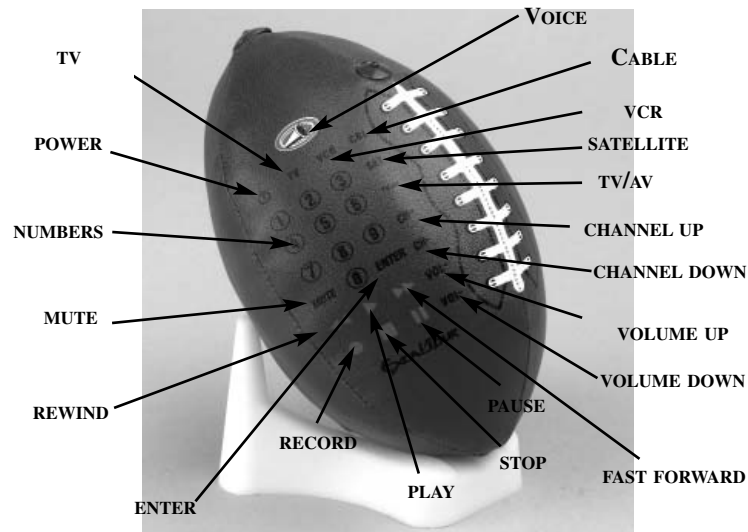

## Functions of Buttons

**VOICE:** Press to hear "Are you ready for some football?"

**ON/OFF:** Press to turn the selected device on or off.

**TV:** Press to control your TV set. Also used to program your remote control.

**VCR:** Press to control your VCR. Also used to program your remote control.

**CBL:** Press to control your cable box . Also used to program your remote control.

**SAT:** Press to control your satellite receiver. Also used to program your remote control.

**TV/AV:** Press to switch the audio/video input between antenna, video, game console, etc.

**MUTE:** Press to turn the device volume on or off.

**ENTER:** Used in programming your

remote controller.

**CH+:** Press to change the channel to the next channel up.

**CH-:** Press to change the channel to the next channel down.

**VOL+:** Press to increase volume.

**VOL-:** Press to decrease volume.

**REWIND:** Press to rewind your VCR.

**PLAY:** Press to play your VCR.

**FAST FORWARD:** Press to fast forward your VCR.

**RECORD:** Press to record on your VCR.

**STOP:** Press to stop your VCR.

**PAUSE:** Press to pause your VCR.

## Installing Batteries

Your remote requires two AA batteries, not included. To install the batteries, pull open the velcro seal on the back of the football. Carefully pull out the battery holder.

Use a small Phillips screwdriver to remove the screw. Lift off the battery compartment lid. Install the batteries, making sure to match polarity (+ and -) with

the diagram inside the battery compartment. Place the tab of the battery compartment lid in its slot and close the compartment door. Replace the screw and tighten it carefully. Insert the battery holder back inside the football and seal the velcro. You are now ready to program your football to control your devices

## Manual Programming of your Remote Control Football

Manually turn off the device that you wish to control. Using the tables of device codes beginning on page 6 of this manual, locate the brand name of the device you want to control. There will be one or more three-number codes listed for each device brand.

Once you have located the device codes, press and hold the key for the device type (TV, VCR, CBL or SAT) that you wish to program your football to control. After about three seconds, the red LED near the threads of the football will come on. This indicates that your football is ready to pro-

gram.

Enter the first code listed for your brand. Press the **ON/OFF** key (just to the left of the **TV** key). If the device turns on, you have entered the correct code. If the device does not turn on, try the next code on the list. Continue entering codes from the list until the device turns on. Your football is now programmed to control the device. Note: If none of the brand codes for the device work, try programming your remote automatically (see next section) or go to:

ExcaliburElectronics.com  
for additional information.

## Automatic Programming of your Remote Control Football

Manually turn off the device that you wish to control. Press and hold the key for the device type (TV, VCR, CBL or SAT) that you wish to program your football to control. After about three seconds, the red LED near the threads of the football will come on. This indicates that your football is ready to program.

Press the **ON/OFF** key (just to the left of the **TV** key). Press the **CH+** key repeatedly until the device turns on. You may need to step through quite a few codes

until this happens. Once the device turns on, **STOP**. Do not press the **CH+** key again.

Press the **ENTER** key to accept the programming. Your football is now programmed to control the device.

Note: If none of the brand codes for the device work, go to [www.ExcaliburElectronics.com](http://www.ExcaliburElectronics.com) for more information.

Follow the above steps for any other device(s) that your football will be used to control.

**CAUTION: THE FOOTBALL REMOTE CONTROL  
SHOULD NOT BE THROWN TO ANOTHER PERSON.  
THE SENSOR LENS ON THE TIP OF THE FOOTBALL  
MAY CAUSE SERIOUS INJURY.**

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
TV	Amiral	000	110	154														
TV	Alko	047																
TV	Alcan	044																
TV	Anilcon	038																
TV	Anam National	038	071	112	116	122												
TV	AOC	005	022	050	062	138												
TV	Apex	119	141	155														
TV	Audiovox	038																
TV	Bell & Howell	008	048															
TV	Brokonic	133	145															
TV	Celebrity	044																
TV	Citizen	005	039	047	050	062	005	156										
TV	Cultymne	005	013	062														
TV	ConnectComy	016	019	038														
TV	Craig	038																
TV	Crown	038	003															
TV	Curtis Mathies	005	039	043	053	062	005	152	158									
TV	Deawoo	005	017	047	050	062	103	145	156									
TV	Dayron	005	062	156														
TV	Dimensia	038	152															
TV	Dumont	001	005															
TV	Electroland	044																
TV	Electrohome	005	037	044	052	066	071											
TV	Emerson	005	011	012	014	015	016	020	021	035	038	043	052	058	057	062	069	124
TV	Envision	005	062															
TV	Fisher	025	040	043	115													
TV	Fujitsu	015																
TV	Hana	015	039															
TV	GE	000	001	005	008	018	032	037	039	059	062	071	074	104	147	152		
TV	Goldstar	005	006	015	023	045	050	062	063	077	086	148	156					
TV	Goldmark	005	082															
TV	Hisense	125																
TV	Hitachi	003	005	018	019	030	080	082	084	087	091	092	095	101	108	124	138	
TV	Infinity	063																
TV	Jancel	120																
TV	JBL	063																
TV	J.C. Penney	005	019	019	032	037	039	041	045	050	055	062	074	077	085	088	102	104
TV	Jensen	005	082															

Device Type	Brand Name	18	17	16	19	20	21	22	23
TV	Amiral								
TV	Alko								
TV	Alcan								
TV	Anilcon								
TV	Anam National								
TV	AOC								
TV	Apex								
TV	Audiovox								
TV	Bell & Howell								
TV	Brokonic								
TV	Celebrity								
TV	Citizen								
TV	Cultymne								
TV	ConnectComy								
TV	Craig								
TV	Crown								
TV	Curtis Mathies								
TV	Deawoo								
TV	Dayron								
TV	Dimensia								
TV	Dumont								
TV	Electroland								
TV	Electrohome								
TV	Emerson								
TV	Envision								
TV	Fisher								
TV	Fujitsu								
TV	Hana								
TV	GE								
TV	Goldstar								
TV	Goldmark								
TV	Hisense								
TV	Hitachi								
TV	Infinity								
TV	Jancel								
TV	JBL								
TV	J.C. Penney								
TV	Jensen								

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
TV	Jensen		005	082														
TV	JVC		010	016	019	024	033	051	056	060	074	088	132	142				
TV	Kawashio		005	041	062													
TV	Kerwood		005	082	085													
TV	Klars Novatnam		038	038	042	120												
TV	KTV		038	080	137	156												
TV	LG		020															
TV	Loeie		063															

Device Type	Brand Name	17	18	19	20	21	22	23
TV	Jensen							
TV	JVC							
TV	Kawashio							
TV	Kerwood							
TV	Klars Novatnam							
TV	KTV							
TV	LG							
TV	Loeie							

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
TV	Logik		008															
TV	Luxman		005	062														
TV	LXI		031	039	011	043	062	083	088	104	117	152						
TV	Magnavox		005	027	029	034	036	042	055	052	063	085	087	088	113			
TV	Majestic		008															
TV	Merantz		005	048	062	063	064											
TV	Mogatron		062	064														
TV	Moriorex		008	043	050	062												
TV	MGA		005	025	026	037	050	062	065	076								
TV	Mitsubishi		005	025	026	028	037	049	050	062	066	076						
TV	Montgomery Ward		008															
TV	Moskela		071	110														
TV	MTC		005	060	062	065												
TV	Multitech		038															
TV	Multivision		070															
TV	NAU		031	041	062	080	108											
TV	NEC		005	013	050	062	071											
TV	Nikon		047	062														
TV	Omica		038															
TV	Optimus		106															
TV	Optonica		054	110														
TV	Orion		012	129														
TV	Panasonic		063	071	074	127	135	140	150									
TV	Philco		005	016	077	029	036	042	050	055	062	063	066	071				
TV	Philips		005	016	027	032	036	042	046	055	063	086	071					
TV	Pioneer		005	062	066	072	075	106	121									
TV	Portland		005	047	050	052	156											
TV	Price Club		065															
TV	Prima		180															
TV	Prism		074															
TV	Proscan		000	039	104	152												
TV	Proton		005	016	062	065												
TV	Quasar		071	074	080	140												
TV	Radio Shack		043	142														
TV	Radio Shack/Realistic		005	016	038	039	043	051	062	143	156							
TV	RCA		000	005	022	030	050	062	065	071	087	091	092	094	100	104	107	109
TV	Realistic		043	152														

Device Type	Brand Name	17	18	19	20	21	22	23
TV	Loak							
TV	Luxman							
TV	LXI							
TV	Magnavox							
TV	Majestic							
TV	Marantz							
TV	Megatron							
TV	Memorex							
TV	MGA							
TV	Mitsubishi							
TV	Montgomery Ward							
TV	Muzola							
TV	MITC							
TV	Multitech							
TV	Multivision							
TV	NAU							
TV	NEC							
TV	Nikon							
TV	Onwa							
TV	Optimus							
TV	Optonica							
TV	Orion							
TV	Panasonic							
TV	Philco							
TV	Philips							
TV	Pioneer							
TV	Portland							
TV	Price Club							
TV	Prima							
TV	Prism							
TV	Proscan							
TV	Proton							
TV	Quasar							
TV	Radio Shack							
TV	Radio Shack/Realistic							
TV	RCA	121	124	130	146	149	152	153
TV	Realistic							

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
TV	Runco	001																
TV	Sampo	005	082	138	143	158												
TV	Samsung	005	016	050	063	067	066	085	083	107	114	143	156					
TV	Sarcus	129	131															
TV	Sanyo	005	026	040	043	079	090	115										
TV	Scott	005	012	015	016	021	038	082										
TV	Sears	005	015	019	025	031	033	039	040	041	043	062	068	068	104	106	115	148
TV	Sherp	005	011	016	065	064	068	061	067	073	089	110	156					
TV	Signature	008																
TV	Sony	044	111	173	151													
TV	Soundesign	005	015	038	055	062												
TV	Starlite	038																
TV	Super-Macy	120																

Device Type	Brand Name	17	18	19	20	21	22	23
TV	Realistic							
TV	Runco							
TV	Sampo							
TV	Samsung							
TV	Sarcus							
TV	Sanyo							
TV	Scott							
TV	Sears	152						
TV	Sherp							
TV	Signature							
TV	Sony							
TV	Soundesign							
TV	Starlite							
TV	Super-Macy							

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
TV	Sylvania	005	007	027	029	034	036	042	055	062	063	066	066	144				
TV	Symphonix	014	038	148														
TV	Tandy	110																
TV	Tatung	071																
TV	Technics	074																
TV	Technwood	005	062	074														
TV	Teknika	005	000	015	016	019	004	000	047	050	055	062	065	127	140	156		
TV	Telecaption	063																
TV	Ineneta	002	007	031	041	043	003	004	005	008	134							
TV	Television	156																
TV	Universal	018	032															
TV	Wards	005	008	014	015	018	021	027	032	034	038	039	042	050	051	062	063	068
TV	Yamaha	005	050	052	056													
TV	Zenith	001	005	006	079	120												
TV/DVD Combo	Broksonic	145																
TV/DVD Combo	RCA	153																
TV/DVD Combo	Sansui	131																
TV/DVD Combo	Ineneta	134																
TV/DVD/VCR Combo	Parasonic	135	150															
TV/DVD/VCR Combo	RCA	140																
TV/DVD/VCR Combo	Sylvania	141																
TV/VCR Combo	Broksonic	153																

Device Type	Brand Name	17	18	19	20	21	22	23
TV	Sylvania							
TV	Symphonix							
TV	Tandy							
TV	Tatung							
TV	Technics							
TV	Technwood							
TV	Teknika							
TV	Telecaption							
TV	Ineneta							
TV	Television							
TV	Universal							
TV	Wards							
TV	Yamaha							
TV	Zenith							
TV/DVD Combo	Broksonic							
TV/DVD Combo	RCA							
TV/DVD Combo	Sansui							
TV/DVD Combo	Ineneta							
TV/DVD/VCR Combo	Parasonic							
TV/DVD/VCR Combo	RCA							
TV/DVD/VCR Combo	Sylvania							
TV/VCR Combo	Broksonic							

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
DVD/VCR Combo	Broksonic	024																			
DVD/VCR Combo	Fuerson		027	032																	
DVD/VCR Combo	JVC	028																			
DVD/VCR Combo	Philips	031	059																		
DVD/VCR Combo	TICA	029																			
DVD/VCR Combo	Samsung	064	024																		
DVD/VCR Combo	Sanyo	102																			
DVD/VCR Combo	Sony	045																			
DVD/VCR Combo	Zenith	063																			
PVR	PuPlay	104																			
PVR	Two	085																			
DVD/VCR Combo	Panasonic	006	086																		
TV/DVD/VCR Combo	TICA	088																			
TV/DVD/VCR Combo	Sylvania	089																			
TV/VCR Combo	Broksonic	114																			
VCR	Admiral	015																			
VCR	Alco	026																			
VCR	Alisa	074																			
VCR	Alkal	001	017	021	025	059	070	075													
VCR	Audiovox	036																			
VCR	Bell & Howell	046																			
VCR	Broksonic	024	040	057	114																
VCR	Calix	055																			
VCR	Capchart	000	031	051	070																
VCR	Carver	048																			
VCR	CCF	026																			
VCR	Citizen	014	016	036	037	050	053	056	082												
VCR	Colortyne	045																			
VCR	Crigo	012	018	058																	
VCR	Curia Melrose	013	016	045	048	053	082	091	098												
VCR	Doswood	014	026	037	042	050	057	074	079												
VCR	Laytron	070																			
VCR	Dimensia	013	068																		
VCR	Fluoridiana	006	056																		
VCR	Emerson	001	003	005	007	009	010	011	014	020	021	027	030	032	033	035	038	039	040	043	
VCR	Fisher	012	019	046	065	101	108	120													
VCR	Fuji	025																			
VCR	Fusel	074																			
VCR	Ginnard	074																			
VCR	GL	000	013	018	022	081	090														
VCR	Go Video	023																			

Device Type	Brand Name	20	21	22	23	24	25	26	27	28
DVD/VCR Combo	Broksonic									
DVD/VCR Combo	Fuerson									
DVD/VCR Combo	JVC									
DVD/VCR Combo	Philips									
DVD/VCR Combo	TICA									
DVD/VCR Combo	Samsung									
DVD/VCR Combo	Sanyo									
DVD/VCR Combo	Sony									
DVD/VCR Combo	Zenith									
PVR	PuPlay									
PVR	Two									
DVD/VCR Combo	Panasonic									
TV/DVD/VCR Combo	TICA									
TV/DVD/VCR Combo	Sylvania									
TV/VCR Combo	Broksonic									
VCR	Admiral									
VCR	Alco									
VCR	Alisa									
VCR	Alkal									
VCR	Audiovox									
VCR	Bell & Howell									
VCR	Broksonic									
VCR	Calix									
VCR	Capchart									
VCR	Carver									
VCR	CCF									
VCR	Citizen									
VCR	Colortyne									
VCR	Crigo									
VCR	Curia Melrose									
VCR	Doswood									
VCR	Laytron									
VCR	Dimensia									
VCR	Fluoridiana									
VCR	Emerson									
VCR	Fisher									
VCR	Fuji									
VCR	Fusel									
VCR	Ginnard									
VCR	GL									
VCR	Go Video									

044 047 048 056 057 054 074 116 121



Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
VCR	Calsider		045	053	056	058	105														
VCR	Griffiths		074																		
VCR	Harman Kardou		015																		
VCR	Huachu		022	008	058	070	071	072													
VCR	JIC Peraway		004	016	018	019	038	040	045	048	055	071	072	087							
VCR	Jensen		036	070	072																
VCR	JVC		010	028	045	046	053	070	073	082											
VCR	Kennedy		018	045	048	053	070	073	082												

Device Type	Brand Name	20	21	22	23	24	25	26	27	28
VCR	Calsider									
VCR	Griffiths									
VCR	Harman Kardou									
VCR	Huachu									
VCR	JIC Peraway									
VCR	Jensen									
VCR	JVC									
VCR	Kennedy									

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
VCR	Kodak	056																			
VCR	LG	056																			
VCR	LXI	056																			
VCR	Magnavox		049	051	052	062	080	083													
VCR	Marantz		018	041	045	046	049	053	082												
VCR	Memorex		012	015	016	046	051	056	074												
VCR	MGA		006	021	121																
VCR	Minolta		038	071	072																
VCR	Mitsubishi		002	006	021	036	072	073	076	079	120	121	122	123	124	126	127				
VCR	Montgomery Ward		015	113																	
VCR	Motorola		015																		
VCR	MTC		016	055																	
VCR	Multitech		016	074	082	117															
VCR	NEC		018	041	045	046	053	070	073	082	097	110									
VCR	Nikko		056																		
VCR	Noblex		016																		
VCR	Optimus		015	056																	
VCR	Optonica		111																		
VCR	Panasonic		055	060	061	086	092	096													
VCR	Pentax		022	036	071	072	082														
VCR	Pentax Research		053																		
VCR	Philco		049	052																	
VCR	Philips		031	049	062	099	111														
VCR	Pioneer		018	072	073	080	103														
VCR	Portland		037	050	078	082															
VCR	Proscan		000	013	098																
VCR	Quasar		061																		
VCR	Radio Shack		015	056	111																
VCR	Radio Shack/Realistic		006	012	016	046	056	065	074	101	111										
VCR	Radix		056																		
VCR	RCA		000	001	013	016	022	029	036	061	071	072	088	091	098	100	106	108			
VCR	Realistic		006	012	014	015	016	046	056	074	101	111									
VCR	Ricon		088																		
VCR	Rinco		051																		
VCR	Rinco		014	016	038	089	075	084	094	117											
VCR	Samsung		018	070	073	107															
VCR	Sansui		012	016	046	102															
VCR	Sanyo		003	014	020	030	040	057	121												
VCR	Scott		012	019	036	046	056	065	071	072	101	109									
VCR	Sears		006	015	050	111	115	118	119												
VCR	Sharp		025	036	112																
VCR	Shinlun																				

Device Type	Brand Name	20	21	22	23	24	25	26	27	28
VCR	Kodak									
VCR	LG									
VCR	LXI									
VCR	Magnavox									
VCR	Marantz									
VCR	Memorex									
VCR	MGA									
VCR	Minolta									
VCR	Mitsubishi									
VCR	Montgomery Ward									
VCR	Motorola									
VCR	MTC									
VCR	Multitech									
VCR	NEC									
VCR	Nikko									
VCR	Noblex									
VCR	Optimus									
VCR	Optonica									
VCR	Panasonic									
VCR	Pentax									
VCR	Pentax Research									
VCR	Philco									
VCR	Phillips									
VCR	Pioneer									
VCR	Portland									
VCR	Proscan									
VCR	Quasar									
VCR	Radio Shack									
VCR	Radio Shack/Realistic									
VCR	Radix									
VCR	RCA									
VCR	Realistic									
VCR	Ricoh									
VCR	Rincoo									
VCR	Samsung									
VCR	Sansui									
VCR	Sanyo									
VCR	Scott									
VCR	Sears									
VCR	Sharp									
VCR	Shincom									

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
VCR	Signature		015																		
VCR	Singer		068																		
VCR	Sony		025	077	095	112															
VCR	STS		071																		
VCR	Sylvania		049	052	062	074	089	121													
VCR	Symphonic		074																		
VCR	Tandy		046																		
VCR	Tashiko		056																		
VCR	Tatung		070																		
VCR	Teac		070	074	100																
VCR	Technics		060																		
VCR	Teknika		056	067	074	081															
VCR	Toshiba		014	019	021	072	101	121													
VCR	Television		016	056																	

Device Type	Brand Name	20	21	22	23	24	25	26	27	28
VCR	Signature									
VCR	Singer									
VCR	Sony									
VCR	STS									
VCR	Sylvania									
VCR	Symphonic									
VCR	Tandy									
VCR	Tashiko									
VCR	Tatung									
VCR	Teac									
VCR	Technics									
VCR	Teknika									
VCR	Toshiba									
VCR	Television									

Device Type	Brand Name	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19				
VCR	Uniflash	016																							
VCH	Vector Research	011	010	015	002																				
VCH	Video Concepts	011	018	021	015	082																			
VCR	Wanka	008	012	014	015	016	020	036	056	059	063	066	071	072	074	106	111								
VCR	XR-1000	074																							
VCH	Yamaha	010	015	018	033	070																			
VCH	Zenith	025	051	068	063	113																			

Device Type	Brand Name	20	21	22	23	24	25	26	27	28
VCR	Uniflash									
VCH	Vector Research									
VCH	Video Concepts									
VCR	Wanka									
VCR	XR-1000									
VCH	Yamaha									
VCH	Zenith									

Device Type	Brand Name	0	1	2	3	4	5	6	7
DVD	Alwa	063							
DVD	Apex	000	001	037	067				
DVD	Broksonic	012	091						
DVD	Daewoo	027							
DVD	Emerson	003	040	058					
DVD	Funai	003							
DVD	GE	011	073						
DVD	Go Video	022	039						
DVD	Hitachi	055	064						
DVD	JVC	010	042	069					
DVD	Kenwood	017							
DVD	Konka	021	026						
DVD	Koss	062							
DVD	Lasonic	034							
DVD	Magnavox	014	033						
DVD	Memorex	019							
DVD	Mintek	053							
DVD	Mitsubishi	004							
DVD	NAD	058							
DVD	Norcent	060							
DVD	Onkyo	046							
DVD	Oritron	031							
DVD	Panasonic	005	059	068	075				
DVD	Philips	014	016	029	052	065			
DVD	Pioneer	028	036	054					
DVD	Proscan	073							
DVD	Qwestar	031							
DVD	RCA	006	009	023	043	047	073		
DVD	Samsung	002	008	032	048	049			
DVD	Sansui	035	089						
DVD	Sanyo	020	066						
DVD	Sharp	074	076	077					
DVD	Sony	007	015	024	038	056	070	071	083
DVD	Sylvania	003	013						

Device Type	Brand Name	0	1	2	3	4	5	6	7
DVD	Toshiba	018	057	061	072	079	088	092	
DVD	Zenith	030	044	082					
DVD/VCR Combo	Broksonic	091							
DVD/VCR Combo	Emerson	040							
DVD/VCR Combo	Go Video	022	039						
DVD/VCR Combo	JVC	042							
DVD/VCR Combo	Philips	016							
DVD/VCR Combo	RCA	023							
DVD/VCR Combo	Samsung	002	008						
DVD/VCR Combo	Sanyo	020							
DVD/VCR Combo	Sony	038							
DVD/VCR Combo	Zenith	044							
HTIB	JBL	087							
HTIB	JVC	081							
HTIB	Koss	078	085						
HTIB	Onkyo	090							
HTIB	Panasonic	084	086						
HTIB	Philips	041	080						
HTIB	Pioneer	025							
HTIB	RCA	045							
HTIB	Sony	051							
HTIB	Venturer	050							
TV/DVD Combo	Broksonic	012							
TV/DVD Combo	RCA	009							
TV/DVD Combo	Sansui	035							
TV/DVD Combo	Toshiba	018							
TV/DVD/VCR Combo	Panasonic	059	075						
TV/DVD/VCR Combo	RCA	006							
TV/DVD/VCR Combo	Sylvania	013							

Device Type	Brand Name	0	1	2
HDTV Tuner	RCA	029		
Satellite	Alphastar	032		
Satellite	Chaparral	006	028	
Satellite	Dishnet	012		
Satellite	Drake	018	024	
Satellite	Echostar	025		
Satellite	Express Vu	000	020	
Satellite	GE	007	033	
Satellite	General Instruments	002	010	013
Satellite	Hilachi	011	030	
Satellite	Hughes Network Systems	016	019	
Satellite	JVC	014		
Satellite	Panasonic	022		
Satellite	Philips	023		
Satellite	Primestar	017		
Satellite	Proscan	007	033	
Satellite	RCA	007	033	
Satellite	Realistic	004		
Satellite	Sony	005		
Satellite	Star Choice	021		
Satellite	STS1	008	009	
Satellite	STS2	003		
Satellite	STS3	027		
Satellite	STS4	015		
Satellite	Toshiba	001	031	
Satellite	Uniden	026		

Device Type	Brand Name	0	1	2	3	4	5	6	7	8
Cable Box	ABC	005	011	022	030					
Cable Box	Archer	037	039							
Cable Box	Cableview	033								
Cable Box	Contec	024								
Cable Box	Eastern	040								
Cable Box	GE	005								
Cable Box	Gemini	001	032							
Cable Box	General Instruments	005	029							
Cable Box	Hamlin	008	021	023	028	038				
Cable Box	Hitachi	005								
Cable Box	Jerrold	001	005	010	011	015	020	029		
Cable Box	Magnavox	031								
Cable Box	Motorola	000								
Cable Box	Movie Time	016								
Cable Box	NEC	026								
Cable Box	NSC	016								
Cable Box	Oak	003	024							
Cable Box	Panasonic	014	017							
Cable Box	Philips	013	019	027	031	032	034	036	041	042
Cable Box	Pioneer	006	018							
Cable Box	Proscan	005								
Cable Box	RCA	017	029	033						
Cable Box	Realistic	037								
Cable Box	Samsung	006								
Cable Box	Scientific Atlanta	002	004	009	030					
Cable Box	Signature	005								
Cable Box	Sprucer	017								
Cable Box	Standard Component	007	025							
Cable Box	Starcom	001	011							
Cable Box	Stargate	001								
Cable Box	Tocom	020	022							
Cable Box	United Cable	011								

Device Type	Brand Name	0	1	2	3	4	5	6	7	8
Cable Box	Universal	035	037	039						
Cable Box	View Star	016	024	031						
Cable Box	Zenith	012								

Device Type	Brand Name	0	1	2	3	4	5	6
AUX	GE	018	020					
AUX	Proscan	018	020					
AUX	RCA	018	020					
CD	RCA	000						
HTIB	JBL	017	036					
HTIB	JVC	043						
HTIB	Koss	006	045					
HTIB	Onkyo	028						
HTIB	Panasonic	024	026					
HTIB	Philips	041						
HTIB	Pioneer	030						
HTIB	RCA	039						
HTIB	Sony	025	038					
HTIB	Venturer	027						
Receiver/Tuner	Aiwa	004	010	012	037			
Receiver/Tuner	Denon	003						
Receiver/Tuner	Harman Kardon	015						
Receiver/Tuner	JBL	015						
Receiver/Tuner	JVC	022						
Receiver/Tuner	Kenwood	021						
Receiver/Tuner	Onkyo	009	040					
Receiver/Tuner	Optimus	001	008	032	033	034		
Receiver/Tuner	Panasonic	023	035					
Receiver/Tuner	RCA	005	007	011	013	019	029	044
Receiver/Tuner	Sherwood	014						
Receiver/Tuner	Sony	016	042					
Receiver/Tuner	Technics	023	035					
Receiver/Tuner	Yamaha	002	031					

## Special Care & Handling

- Avoid rough handling such as bumping or dropping.
- Avoid moisture and extreme temperatures. For best results, use between the temperatures of 39°F and 100°F (4° C and 38° C).
- Clean using only a slightly damp cloth. Do not use cleaners with chemical agents.



## Battery Information

- Batteries should be installed and replaced only by an adult.
- Your ABC's Monday Night Football Talking Remote uses 2 AA batteries, not included.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.
- Do not short circuit battery terminals.
- Remove batteries and store them in a cool, dry place when not in use.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.

Due to continuing improvements, actual product may differ slightly from the product described herein.

## 90-Day Limited Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or con-

sequential damages, so the above limitations and exclusions in these instances may not apply.

The only authorized service center in the United States is:

**Excalibur Electronics, Inc.**

**13755 SW 119th Ave**

**Miami, Florida 33186 U.S.A.**

**Phone: 305.477.8080**

**Fax: 305.477.9516**

**[www.ExcaliburElectronics.com](http://www.ExcaliburElectronics.com)**

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton.

If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

**PLEASE DO NOT SEND  
YOUR UNIT WITHOUT  
RECEIVING AN ESTIMATE FOR  
SERVICING. WE CANNOT  
STORE YOUR UNIT!**

# EXCALIBUR ELECTRONICS

EXCALIBUR ELECTRONICS, INC.  
13755 SW 119TH AVENUE,  
MIAMI, FLORIDA 33186 U.S.A.

WE MAKE YOU THINK

PHONE: 305.477.8080

FAX: 305.477.9516

EXCALIBUR ELECTRONICS



*Play games  
live at:*

[www.ExcaliburElectronics.com](http://www.ExcaliburElectronics.com)